

## M6/S6 Fan Connection Demo

1. Aura Sync ARGB header link to motherboard addressable ARGB port on the motherboard.
2. How to extend fans? 5V3pin ARGB header link additional 3pin male of fan and female fan link to motherboard addressable ARGB port on the motherboard, (under extension mode, it is available for Aura SYNC only, ie, RGB light mode via software controlled, and build-in manual mode disable).
3. Click the LED button to switch modes; press and hold for 3 seconds to switch the motherboard synchronization mode, or restore the self-control mode; press and hold for 5 seconds to turn off the light.

## ARGB FAN CONNECTION INSTRUCTION

